



Step 1 and 2

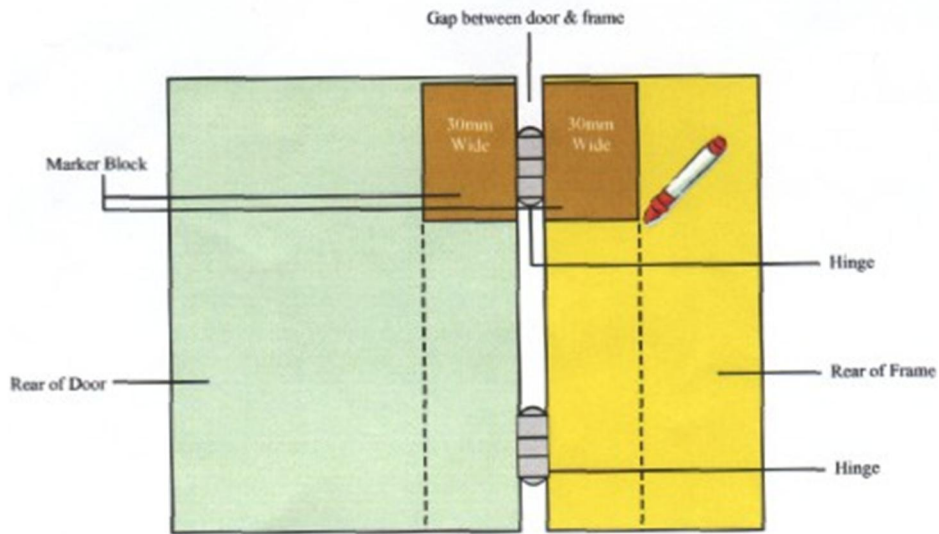

Step 3 and 4

With the door in the closed position, use a pencil/pen to draw a guideline on the door frame using the wooden measuring block provided 1 ¼ inch wide.

Simply repeat the procedure on the door to produce a second guideline

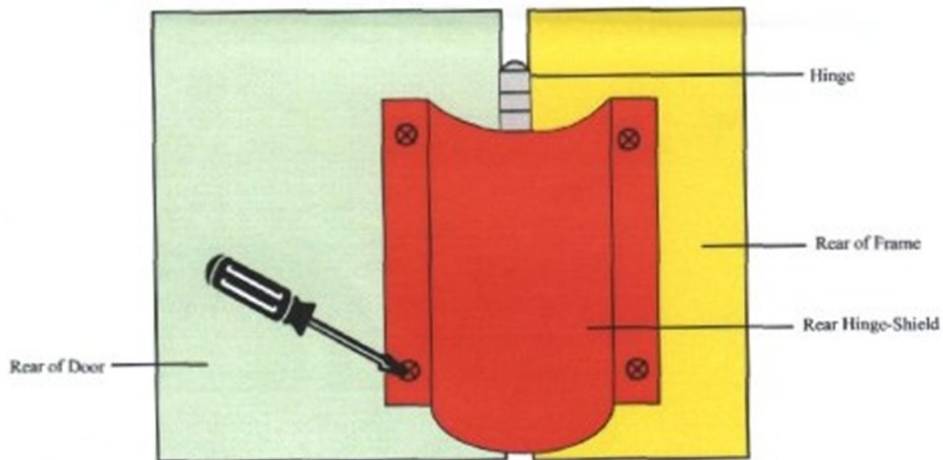

Remove the protective coating from the tape. Line up the edge of the rear hinge GUARD parallel to the guideline on the frame. Press firmly to hold in position before finally securing with the **screws** provided (the screws should be fitted at approximately 300mm centres). Repeat this procedure to attach rear hinge GUARD to the door

Please ensure you use the screws provided or an exactly matching size and type of screw.