



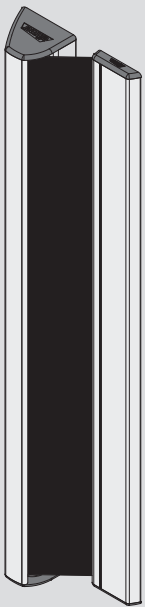


scope of supply

-  1 X
-  1 X
-  1 X
-  11 X
-  11 X
-  1 X
-  1 X

application

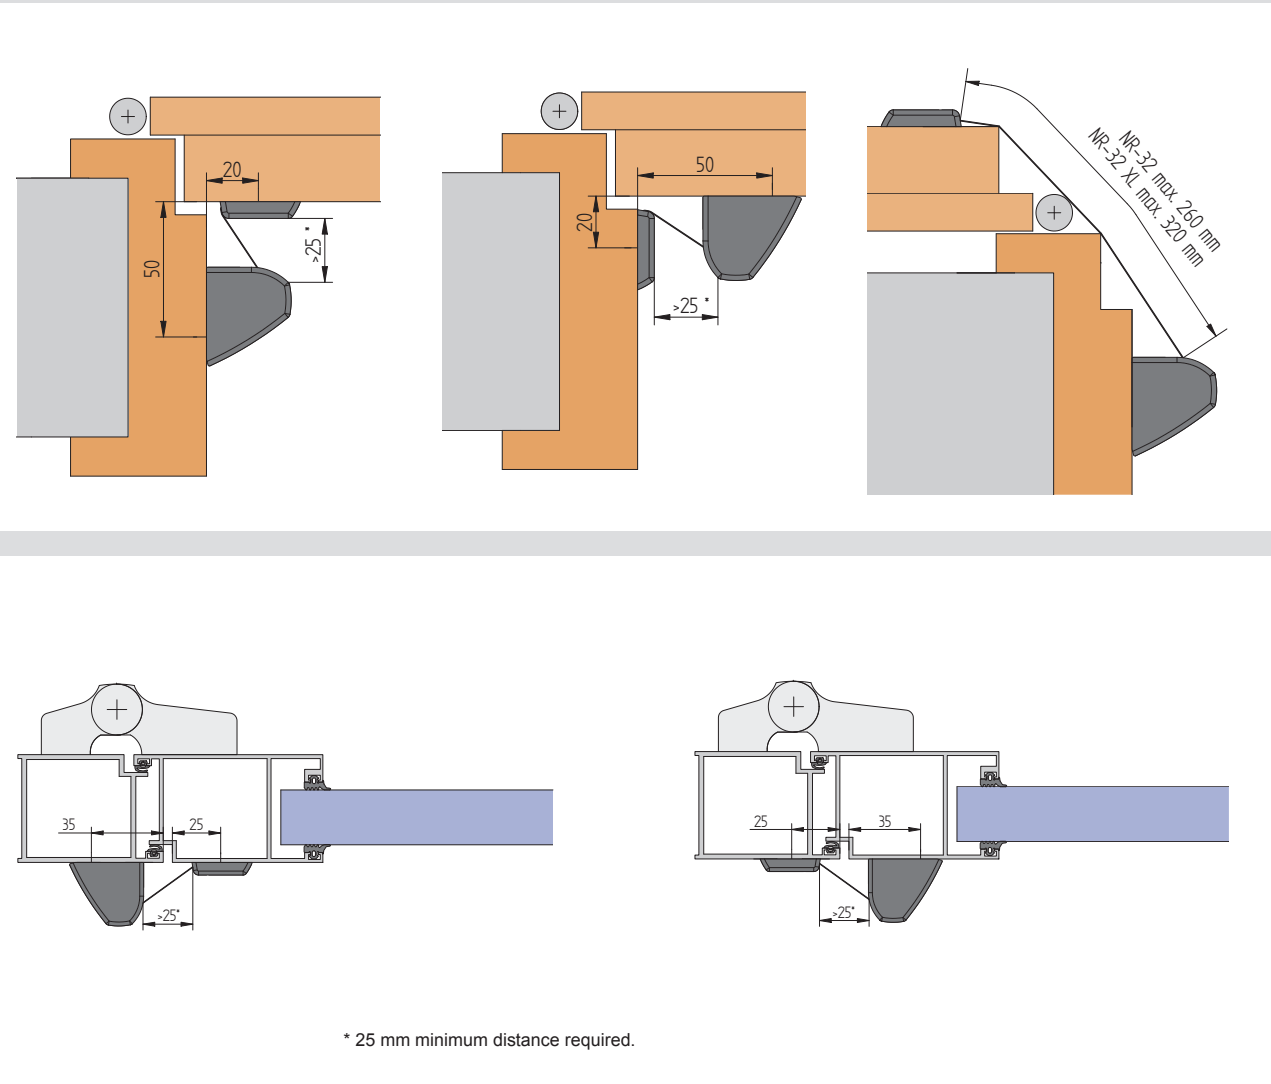







assembly

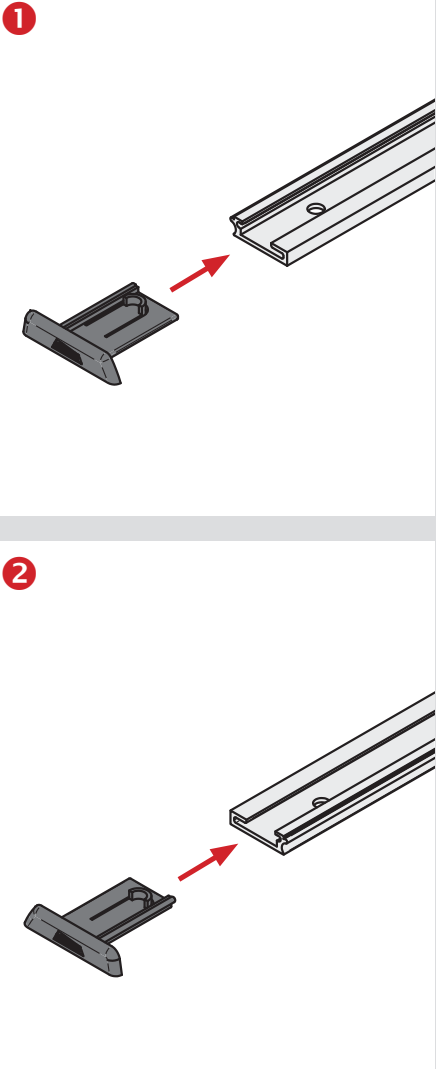


Please note the alternative installation situations in the application examples. The use of finger protection does not obviate the duty of supervision. Technical specifications are subject to change.



assembly

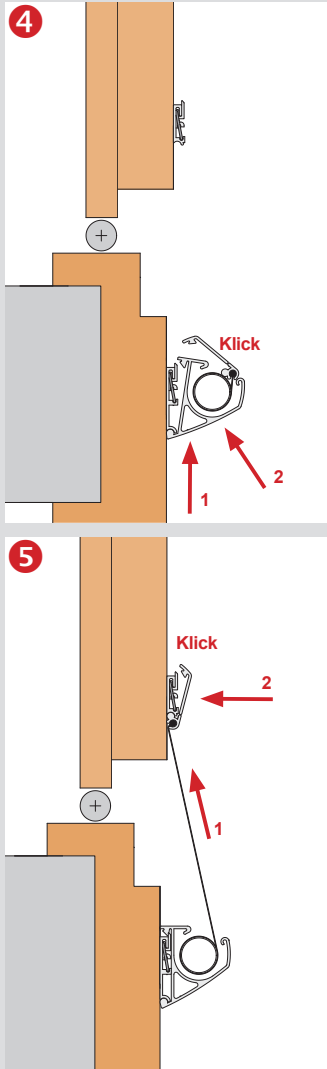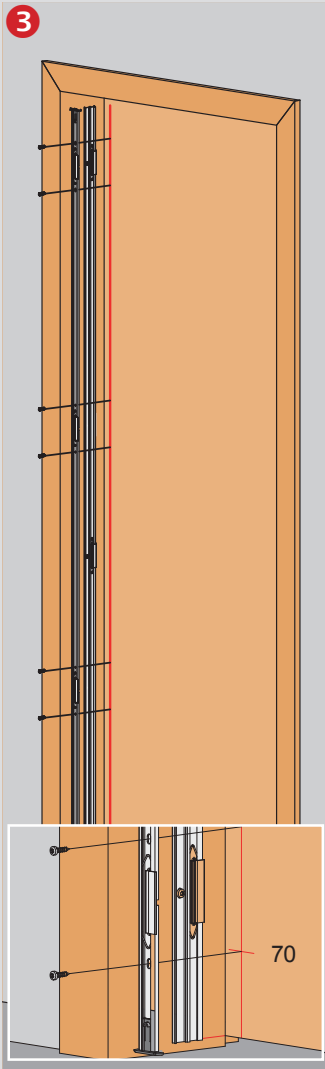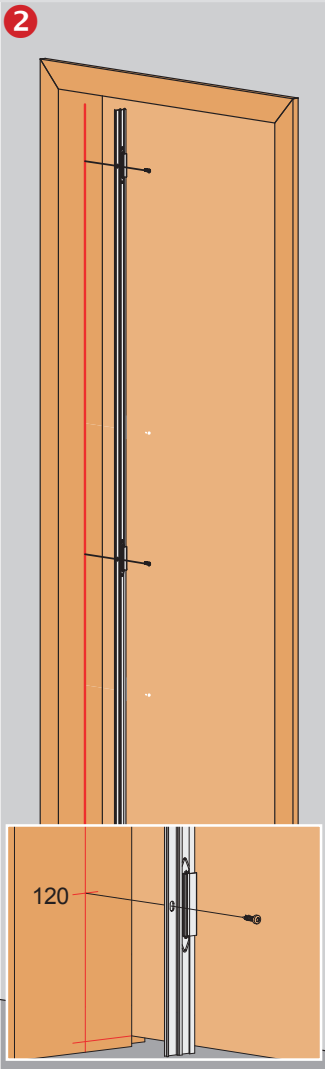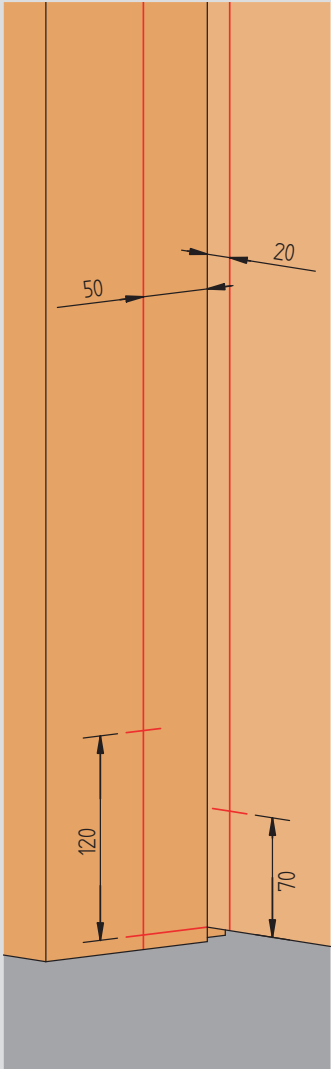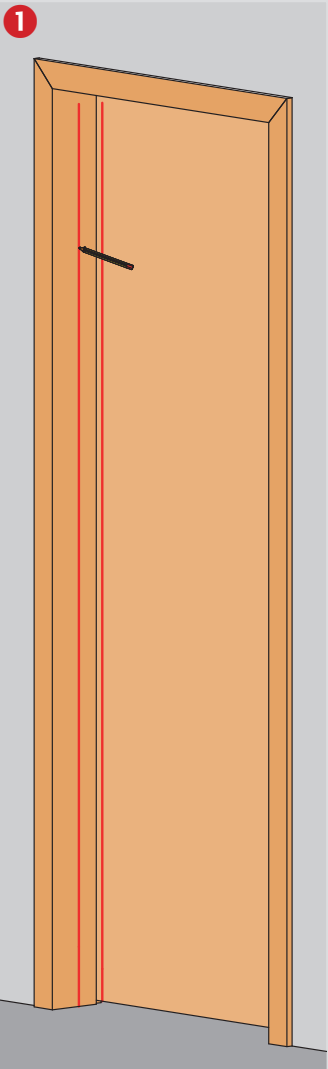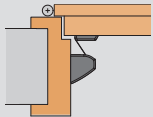








disassembly

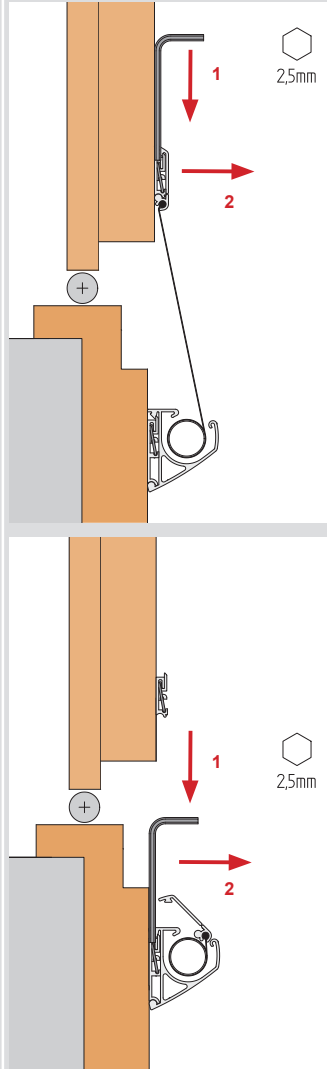



Please note the alternative installation situations in the application examples. The use of finger protection does not obviate the duty of supervision. Technical specifications are subject to change.



assembly

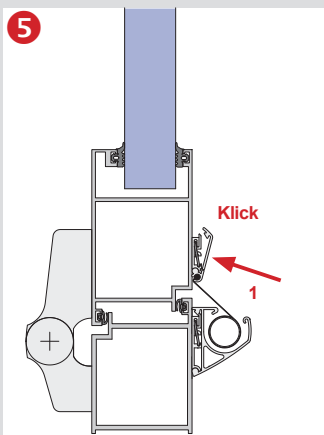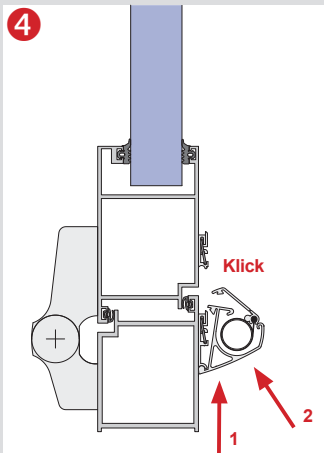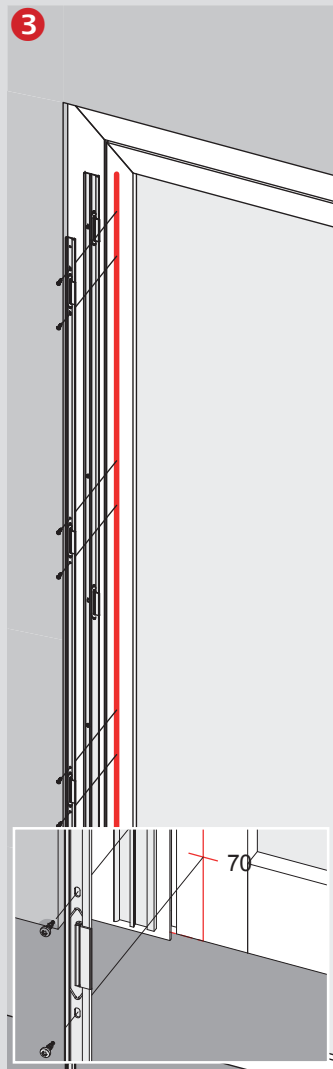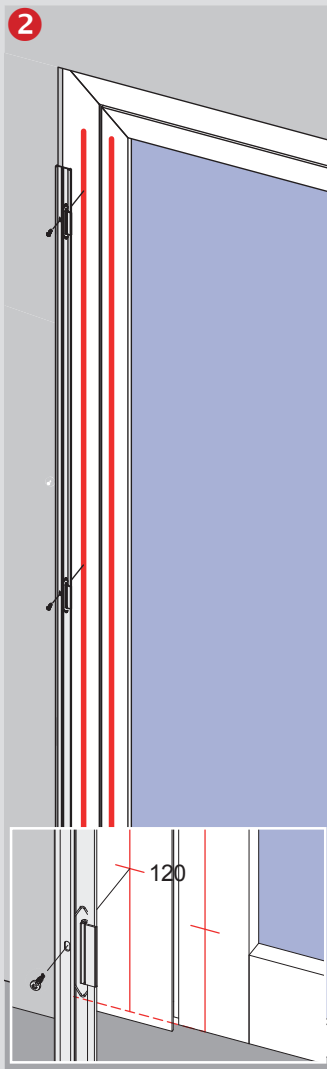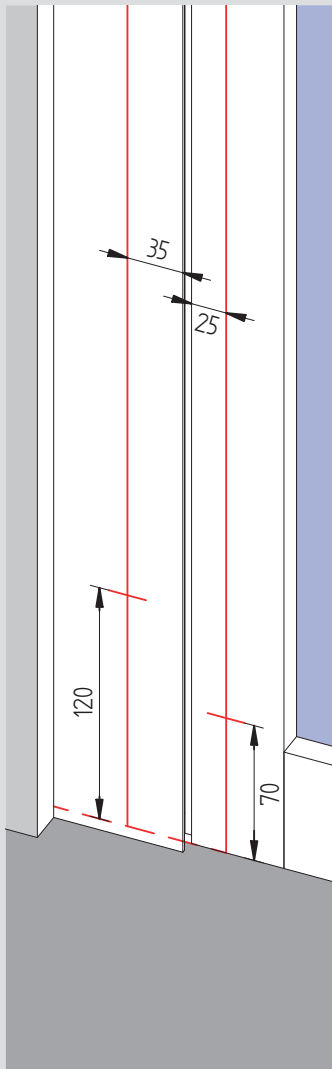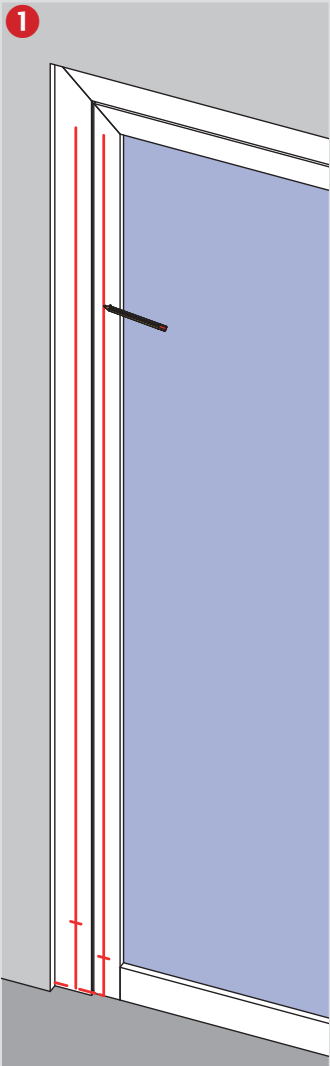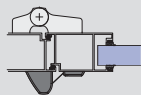





disassembly

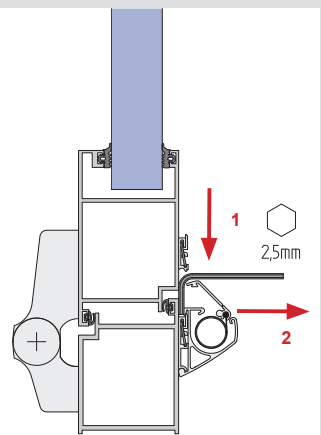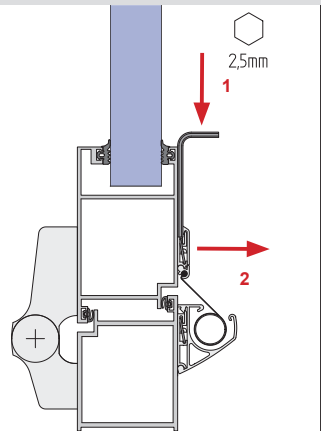

Please note the alternative installation situations in the application examples. The use of finger protection does not obviate the duty of supervision. Technical specifications are subject to change.



assembly with existing hardware devices like pushbar or touchbar

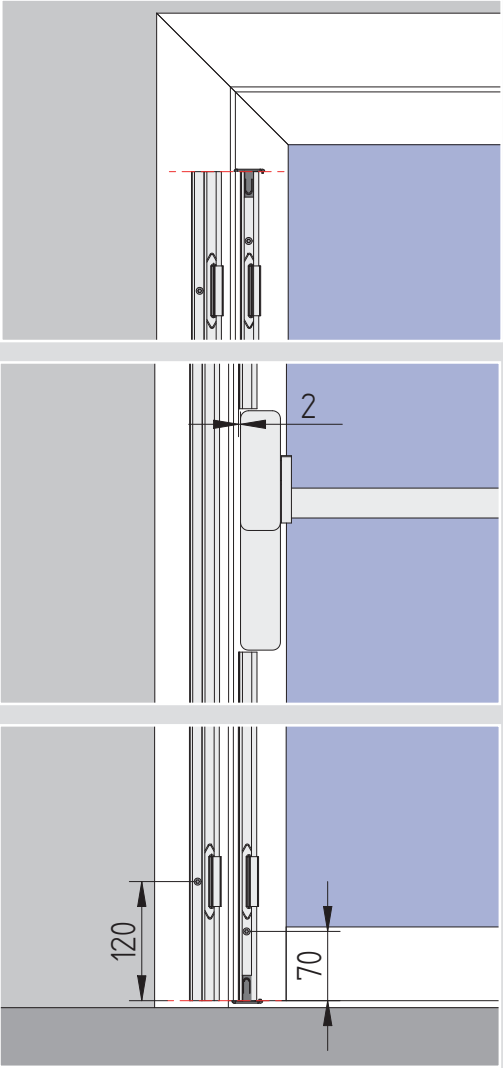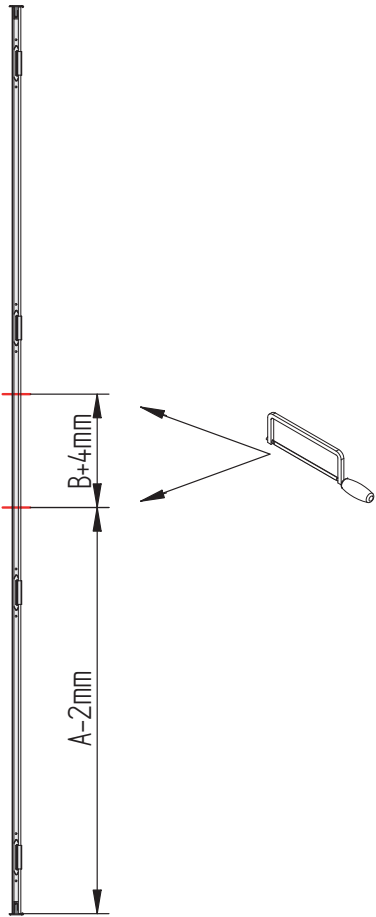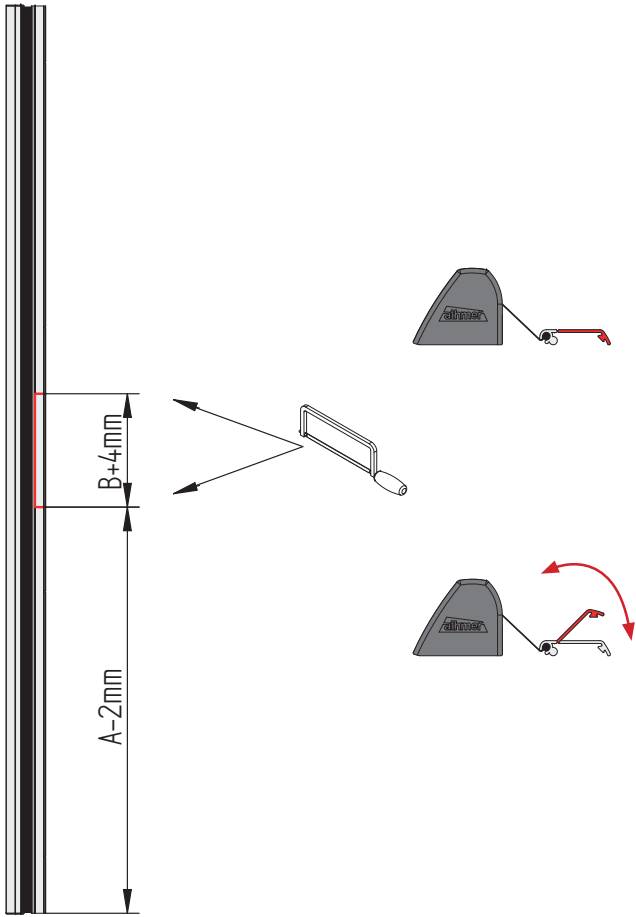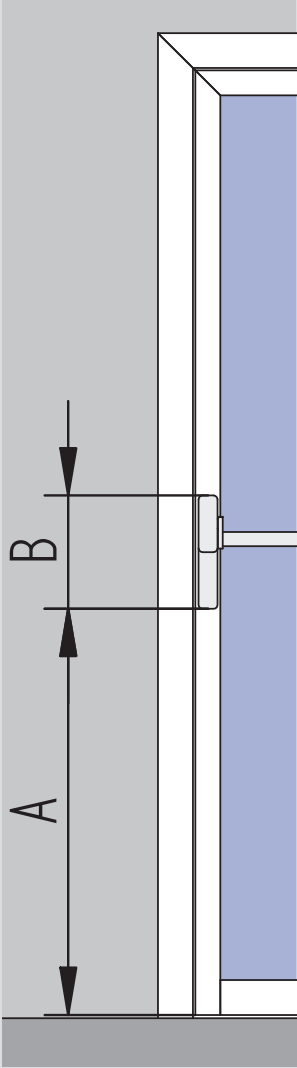

Please note the alternative installation situations in the application examples. The use of finger protection does not obviate the duty of supervision. Technical specifications are subject to change.